Mobilita Deluxe Wheelchair

CODE M604MC, M604MG



www.mobilita.in TollFree : 1800 121 8485

Product Description

Weight Capacity: 100 Kg



Mobilita wheelchairs are a product of quality engineering and are manufactured to meet our own highly rigid specifications and will surpass all your expectations.

Please read this manual carefully to ensure safe usage and understanding of maintenance instructions.

EVERYDAY USE

- To open chair Open wheelchair by tilting to one side and pushing down on seat rail until fully opened.
- To Close / Fold Chair First fold foot plates to vertical position. Grab seat with both hands at front and back edge and lift. Or, tilt chair to one side and lift up on seat rail.
- Flip up Arms Flip up arms by depressing release spring button and lifting arms out of front socket.

CUSTOM ADJUSTMENTS *

Adjusting length of Footrest / Leg rest - When adjusting length of foot rests or leg rests, user should be sitting in wheelchair with feet on the foot plates. Loosen bolt on the clamp around support assembly. Raise or lower foot plate to desired position that will provide maximum support of thighs. Front rigging should not be so low that it causes uncomfortable pressure to thighs at front of seat upholstery. Footrest should not be lower than 2-1/2" from the ground to ensure clearance.

Adjusting / Elevating Leg rest - Lift foot plate on leg rest assembly to desired position. Release leg rest assembly and it will automatically lock into place. To lower, push out on leg rest lever and lower foot plate to desired position.

PERIODIC INSPECTION & CARE

Wheels - Large rear wheels should be inspected at least once a month to ensure proper tightness. Check for wheel wobble or looseness.

General Care - Wipe chrome parts with a clean, soft cloth at least once a week. All metal parts can be cleaned with auto wax or similar products. If exposed to moisture, dry immediately. Do not use an abrasive cleanser that will scratch the finish.

USE & SAFETY

Wheel Locks - Engage both wheel locks before getting in or out of chair, leaning forward in chair, or while in an elevator or wheelchair lift. Locks are engaged by pushing handle completely forward. Adjustments to locks are made by loosening or tightening nut on the carriage bolt. Tighten nut and bolt to secure in position. Test for correct locking action before actual use.

Tyres - Solid tyres need minimal maintenance, but should be cleaned occasionally with a damp cloth. Replace if tyres become severely worn or cracking appears.

Front Castors - Castors should be checked periodically and lubricated occasionally.

Removal of Swing away Foot Rests / Leg Rests - Release lock by pushing on the front rigging lever. Swing-away foot rest /leg rest out and sideways. Lift to remove.

CAUTION

Do not attempt to adjust or operate wheelchair without reading carefully all instructions in this manual

This wheelchair is not suitable to be used as a seat that can be used within vehicles of any kind. Always transfer wheelchair user to a vehicle manufacturers approved seat and use safety restraints available

Do not operate this wheelchair on roadways, streets or any surfaces with vehicular traffic.

Do not attempt to operate on inclines 10% or greater without proper assistance.

Be sure to completely engage wheel locks when getting in and out of wheelchair or when in elevator or wheelchair lift.

Wheelchair should be on a smooth, stable and level area with wheel locks engaged before transferring user in or out of wheelchair.

When getting in or out of wheelchair, do not stand on or apply weight to foot rests.

Before reaching or leaning forward, rotate castors to front of the wheelchair engage wheel locks to help prevent wheelchair from tipping over.

Do not lean over or apply weight to the top of wheelchair back. This can cause wheelchair to tip over. When trying to extend arms over back, only reach as far as your arm can extend without having to alter your seating position.

DO NOT stand on wheelchair.

DO NOT use wheel locks to slow your descent down an incline.

Abruptly changing directions while going down an incline could cause instability or possible tipping over.

Stability - Wheelchair is designed to be safe and stable as long as center of gravity is maintained while going about normal activities. Care must be taken while performing activities that shift your center of gravity in the chair. Never reach so far that require you to shift in the seat or bend over out of the chair.

Ramps - Be sure of your own capabilities, limitations and strength before attempting to go up a ramp. Correct techniques on ramp negotiation should be shown to you by a qualified professional. Assistance is recommended when going up or down inclines greater than 10 degree. Avoid changing direction when going down an incline, as this could result in instability of tipping over.

^{*}Applicable for certain wheelchair models

Warranty

Your Mobilita branded product carries a limited warranty to be free from defects in material and workmanship. Applicable to the original purchaser only.

This device is built to exacting standards and carefully inspected prior to shipment. This Warranty is an expression of our confidence in the materials and workmanship of our products and our assurance to the consumer of years of dependable service.

This warranty does not cover device failure due to owner misuse or negligence, or normal wear and tear. The warranty does not extend to non-durable components, such as rubber accessories, casters, and grips, which are subject to normal wear and need periodic replacement.

If you have a question about your Mobilita device or this warranty, please contact an authorized Mobilita dealer.



© 2018 Eternity Distribution Pvt. Ltd. All rights reserved

Mobilita is a trademark of Eternity Distribution Pvt. Ltd.

Chennai, Tamil Nadu, India | Made in China for Mobilita customercare@mobilita.in | TollFree 1800 121 8485





www.mobilita.in TollFree : 1800 12<u>1 8485</u>

